

TECSUN
RADIO AUSTRALIA

ICR-100

Radio Recorder / Digital Audio Player



OPERATION MANUAL

Please read this instruction carefully before using the device


TECSUN RADIO AUSTRALIA

24/9 Powells Road, Brookvale, NSW 2100 Australia
Email: info@tecsunradios.com.au

Ph: +61 2 9939 4377
www.tecsunradios.com.au

1

● Function instructions and descriptions

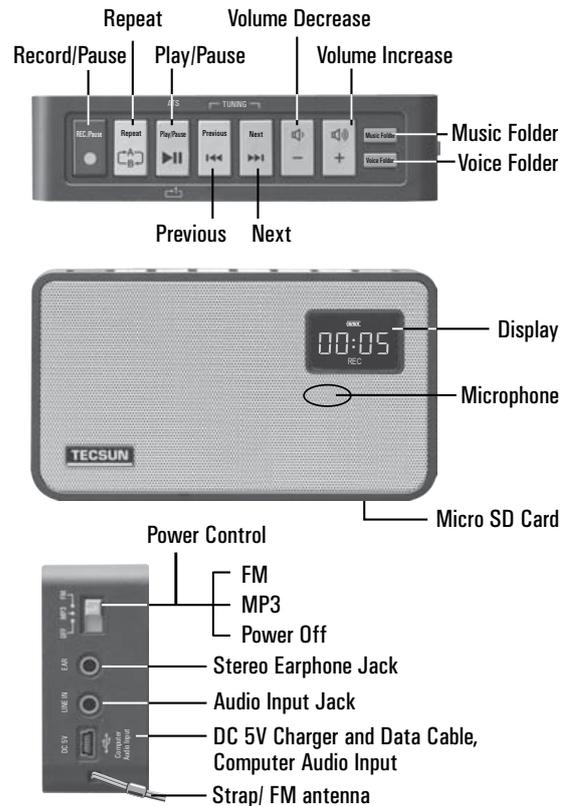

2

1 Playing FM Radio

AUTO TUNING

Turn on the device by pushing the [OFF/MP3/FM] button to "FM" location, press and hold the [◀◀] or [▶▶] button to auto search to the next available station.

ATS

Press and hold the [▶▶] button to auto search and store all the available stations into the memory, then press the [◀◀] or [▶▶] button to tune into those stored stations.

Note:

- When you find yourself at a new geographical location, it is recommended to perform the ATS function again.
- After removing the battery from the device, please perform the ATS function again.

2 MP3 Player

1. Insert the micro SD card.
2. Push the [OFF/MP3/FM] button to "MP3" location.
3. Press the [Music Folder] button to enter music file; press the [Voice Folder] button to enter recording file.
4. Press either the [◀◀] or [▶▶] button to select your desired stored music/voice file.

3

5. To pause while playing, press the [▶▶] button.
6. In MUSIC mode, press and hold the [◀◀] or [▶▶] button to jump 10 music files back or forth.
7. In VOICE mode, press and hold the [◀◀] or [▶▶] button will fast play the recording file.

Note:

For energy saving, the display will turn off automatically if there is no operation within 10 seconds. You can press any button to activate the display again.

AB REPEAT


To activate the AB repeat function in MUSIC mode, press the [AB] button once to select your desired starting point A, then press it again to set the ending point B. The device will repeat playing the selected A to B section.

To deactivate the AB repeat playing, press either the [AB] or [◀◀] / [▶▶] button.

To pause the AB repeat playing, press the [▶▶] button, press again to continue.

3 Line in

Connect the line in cable and turn on the device to function it as an external speaker .

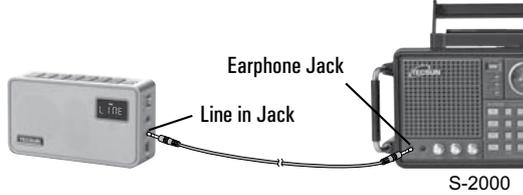

4 Recording

Push the [OFF/MP3/FM] button to either "MP3" or "FM" mode, then press the [Record] button to start recording.

- In FM mode, the device records FM broadcasting.
- In MP3 mode, it records external voice via built in MIC.
- In Line in mode, it records from the connected player.

To stop the recording

- Radio mode, press the [AB] or [▶II] button.
- MP3 or Line in mode, press the [AB], [▶II] or [◀◀] / [▶▶] button.

Note: After recording, the device will repeat playing the last recorded file

Pause Recording

To pause the recording, press the [▶II] button.

Note:

1. In radio recording mode, you can press the [◀◀] or [▶▶] button to change the recording station, whereas the device will keep on recording.
2. All the recorded files will be stored in the VOICE folder of the micro SD card.

5 Deleting Files

In MUSIC mode, press the [◀◀] / [▶▶] button to select your desired file, then press and hold the [AB] button until "dEL" flashes on the display, press the [AB] button again to delete the file.

6 How to Select FM Frequency Range

1. Push the [OFF/MP3/FM] button to "FM".
2. Press and hold the MUSIC folder button to select your desired frequency range. The display shows whether 76-108MHz or 87-108MHz is selected.

7 Connecting with Computer

1. Connect with the USB cable to the computer.
2. Push the [OFF/MP3/FM] button to "MP3" or "FM" with PC shows on the display.
3. Open the music file from your computer, then you can listen to your desired music via this device.
4. You can also press on the [◀◀] / [▶▶] button of this device to select your music on your computer.
5. If you insert a micro SD card, you can use the computer to input or delete files directly.

Note:

To exit the audio speaker function, press and hold the [▶II] button, then the device will function as a battery charger.

8 Charging the Lithium Battery

- Adaptor (not included) with USB port: insert the lithium battery to the device, then connect with the adaptor for battery charging.
- USB cable: turn off the device, then connect with the PC for battery charging function.

9 Questions and Answers

Q: I cannot turn on the device?

A: The battery power maybe too low, charge the battery then try again.

Q: I cannot play the music in the micro SD card?

- A:** 1. The device can play MP3, WMA or WAV format, if you have other than these 3 formats, it will not play, or the file is corrupted.
2. The card maybe damaged.

Q: When I use it as a Computer speaker, it does not turn on?

A: Please follow below steps to try again: Connect the USB cable to the computer, turn on the device (set switch to MP3 or FM) then turn on the music player on your computer.

If you still cannot hear the sound, try the following steps.

1. Connect the computer with this device
 - Turn on the device, use the mouse to open the speaker menu on the right corner of your computer → select " Adjust Audio Properties".



2. Select "Audio".



3. Select Default device option → select "USB Audio Device" → select "OK".



4. Connect your device with the computer, it should work properly.

Q: Why some stations are not stored when performing the ATS function?

A: For some stations the signal is too weak, or there may be too much interference. It is suggested to search and store the stations manually.

● **Maintenance**

1. Do not drop or damage the device, avoid contact with water.
2. Do not expose to temperatures below -5°C or over +50°C.
3. Do not clean the machine with chemicals.
4. Do not open the machine and change components, this will terminate the warranty.

● **Note on Lithium Battery**

1. The battery may explode if handled in an unproper way.
2. You can only use the same type of battery.
3. Do not use it in an extreme cold or hot temperatures.
4. Never throw the used battery into fire.
5. When going onto an aircraft, do not place the battery into the checked-in luggage; place it into your carry-on luggage in the cabin.

● **LED Display**



No SD card or no file on card



Music number



Duration



Pause sign



Single music repeat



All repeat



Computer Speaker / data communication



FM Frequency



Pre select station



 
Recording



Pause/Rec.



Card is full



Select start point



Select Repeat ending point



Audio Input



Delete file



No file in the folder



Power is full



Power is low



Power is exhausted



Charging

● **Specifications**

1. Music formats: MP3/WMA/WAV
2. Recording format: MP3/128Kbps
3. FM frequency range: 76-108 MHz
You may select as you need
Used in all countries outside Japan and Russia 87-108 MHz
Japan 76-108 MHz
4. FM Noise sensitivity: better than 3µV
5. Speaker size: Φ40mm, 4Ω, 3W
6. Sound Response: 20Hz- 20kHz
7. Charger (Not included): USB, 5V with current 250mA
8. Unit Size: 108 X62X 28mm
9. Recording time

SD Card	1G	2G	4G	8G
Recording Time	15 Hours	30 Hours	60 Hours	120 Hours

Note:

1. This chart shows recording on a blank card, maximum card supported is 32 GB
2. Each recording time is not limited, but the longest recording time is 60 minutes, over 60 minutes, it will create a new file.

● **Included**

- 2G Micro SD card.....1 PC
- Audio Cable.....1 PC
- USB Cable.....1 PC